



CITIZEN

Eco-Drive. A revolutionary watch.

TECHNICAL BULLETIN

Provided by: After Sales Service Department

Bulletin Number: 2002 - 6

Date: May 1, 2002

All Reset Feature

Many of our multi-function, complicated and Eco Drive series timepieces feature an "All-Reset" function. This feature is often overlooked when trying to address a setting concern.

After a battery change on a multi-function and complicated timepiece, or when an Eco Drive model reaches a low charge or no charge state, an "all reset" is required to restore normal operation. An "all-reset" may also be needed if the watch is dropped, receives a sharp knock or is subjected to static electricity.

This function gives a "base" point of operation to the movement. This is much like restarting a computer after a power outage. If the "all-reset" is not performed, the watch may continue to operate in an erratic fashion although the battery is new or an Eco Drive model has been fully recharged. The procedures vary by model and are outlined in the instruction book. After the "all-reset", you will need to set the "0-position" as well as the time and date.

Be sure to give the "all-reset" feature a try before sending your multi-function, complicated or Eco Drive watch for repair. It just might solve that setting issue you have been working on.

CITIZEN WATCH COMPANY OF AMERICA, INC.

1000 West 190th Street, Torrance, California 90502-1040 Technical Service: (800) 321-1023 Ext. 4234