



**CITIZEN**

Eco-Drive. A revolutionary watch.

# TECHNICAL BULLETIN

Provided by: After Sales Service Department

Bulletin Number: 2002 - 03

Date: January 30, 2002

## **New Model Features** **JU0010 Elegance Series** **(Spring 2002 Introduction)**

This World Time model is equipped with a new "Shutter" mode feature not previously seen in Citizen Timepieces. This exciting new model combines the functionality of an analog / digital timepiece, with the look of an Analog piece. Features can be accessed at the touch of a button allowing viewing of the digital display only when desired.

The Digital display is activated by the mode button (upper left). When the button is pressed and released, the following is displayed, starting from the "shutter mode": Time, Calendar, Alarm, Chronograph, Timer, World Time Zone and finally back to Shutter Mode (digital display hidden).

After approximately two minutes of a button not being depressed, the watch will automatically revert to the "Shutter" mode. The exception to this is when the digital display is in the Chronograph or Timer modes in which the watch will revert to the shutter mode after approximately 10 minutes. There is not an option to display the digital portion at all times.

This model also features an EL Backlight via a push button (lower right button). When pushed, the time display of the digital mode will appear backlit enabling the digital time to be viewed in the dark



**Shutter Closed**  
(Normal Viewing)



**Shutter Open**  
Digital Display Active

CITIZEN WATCH COMPANY OF AMERICA, INC.

1000 West 190th Street, Torrance, California 90502-1040 Technical Service: (800) 321-1023 Ext. 4234