




BLINKING


MAIN DISPLAY

Mode change each time crown is pushed

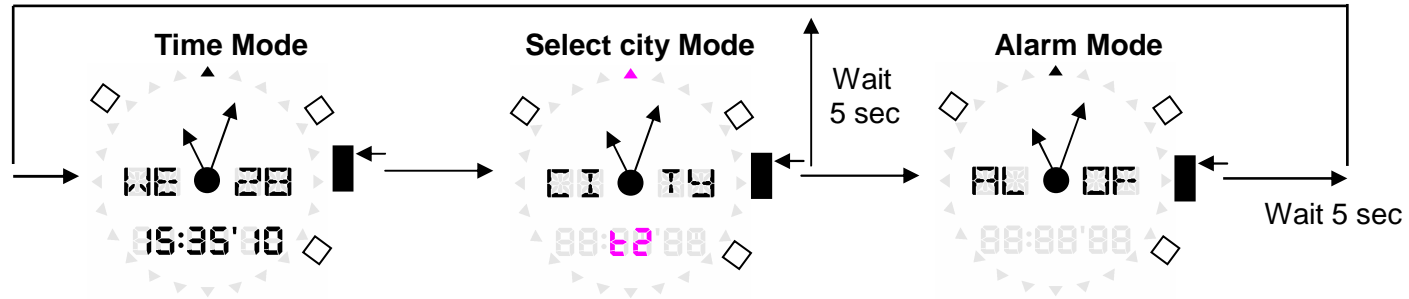

SYNCHRONIZING THE HANDS

From TIME mode, pull the crown. Movement is going into SYNC mode for adjust and synchronize the hands' position

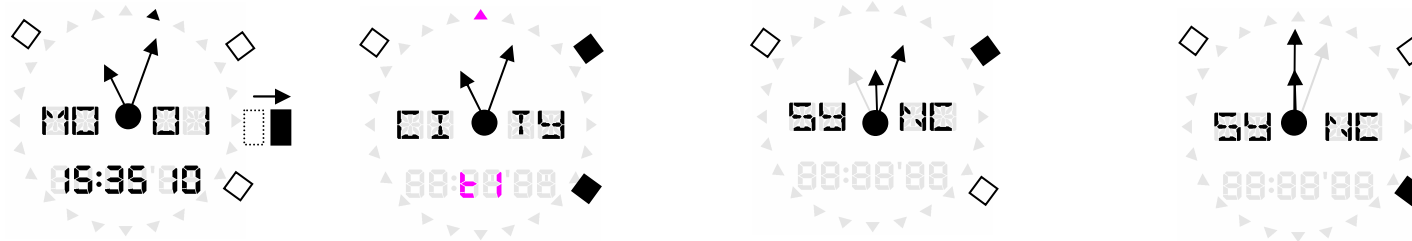

Push A:
Hour hand is running


Push B:
Minute hand is running

Before going out this mode, hands must be in position 12h00

When going you go out this mode by pushing the crown, hands indicate the time of the selected city.

TIME ADJUST


Short : If Time has been already set, changing city will automatically set the new hour

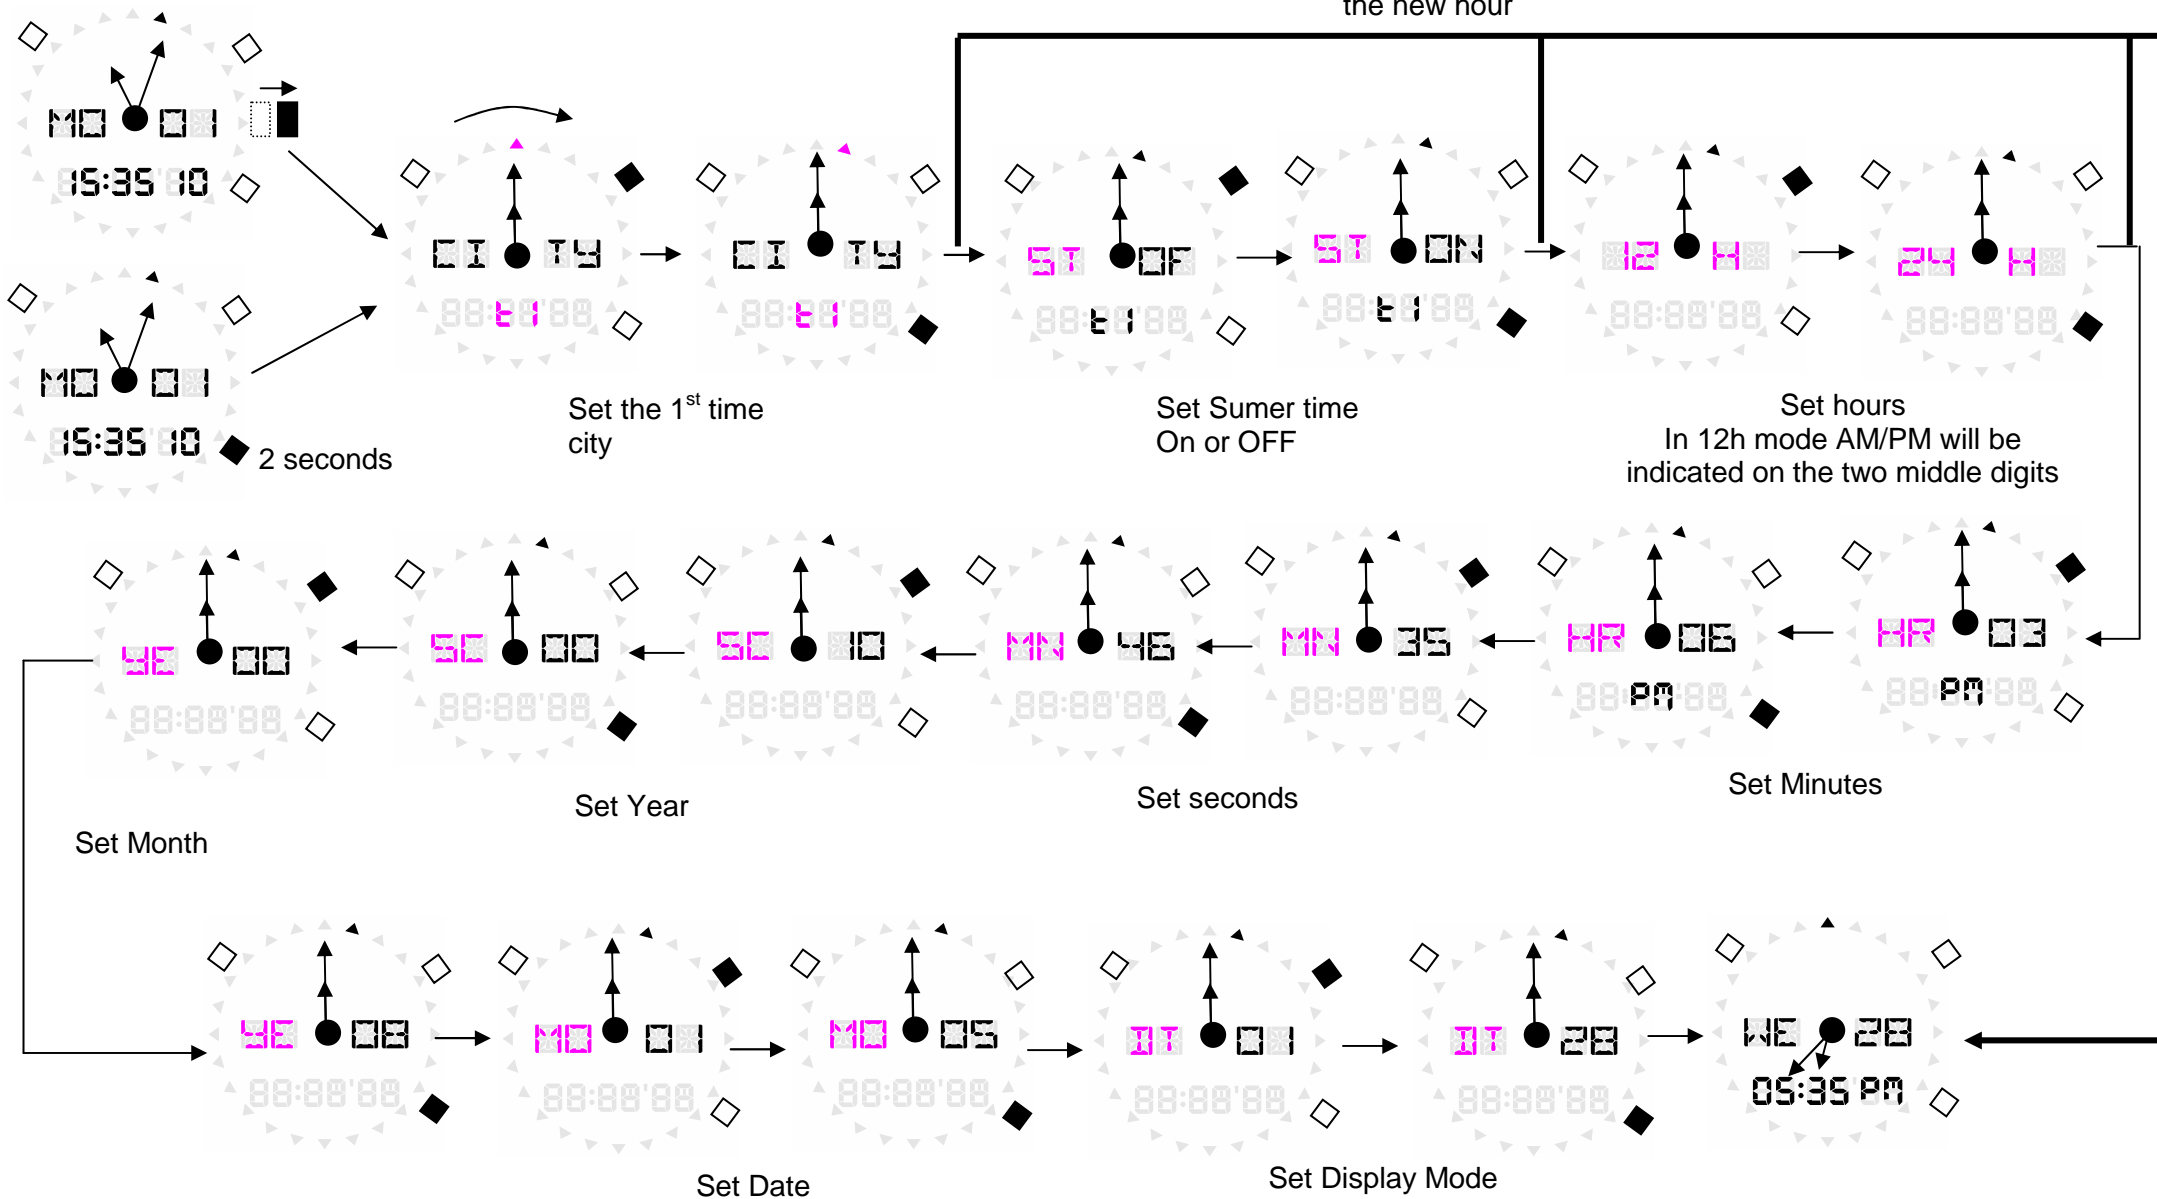

ALARM MODE

1) ALARM ADJUST

Push the crown to get in ALARM mode
 To ADJUST Alarm, push on B at least one second.

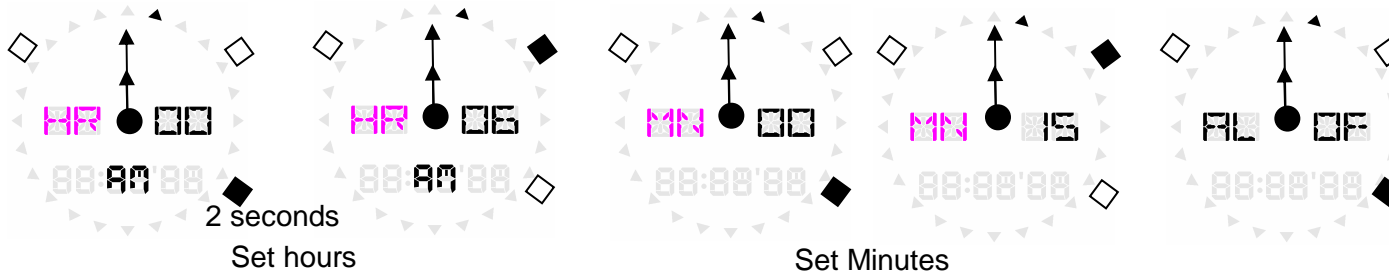


No action on buttons, for 3 seconds gets out ALARM ADJUST

2) ON/OFF



SELECT TIME ZONE MODE

Push the crown to go in 2nd Time zone mode. In this mode you can select the city that you would like to have the time.

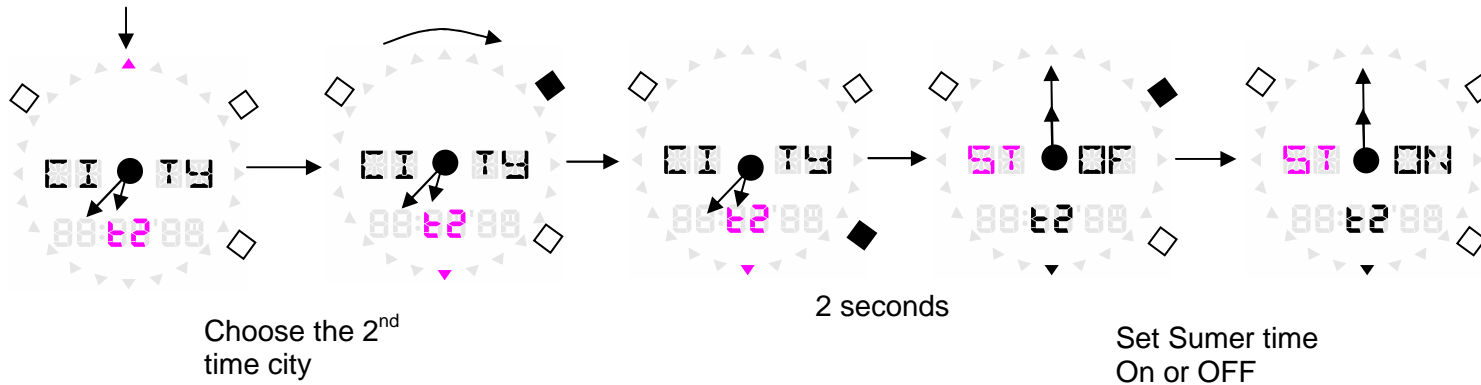

When you go out this mode, the display will show the 2nd time and the hands, the 1st time.

VOYAGER FUNCTION



From Time mode, pushing on A et B together for 2 seconds exchange time.
Local Time (hands) becomes 2nd time (display) and 2nd time (display) becomes Local Time (hands)

DETECTION OF LOW BATTERY

When the detection of low battery is detected, BATT and the date are blinking alternatively.

