





**SEIKO**

**QUARTZ**

**Cal. 2A32A**

**PARTS  
CATALOGUE**

# Cal. 2A32A

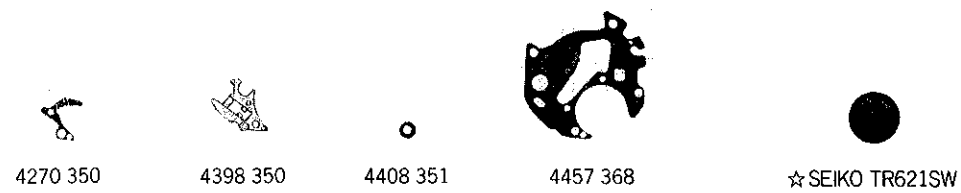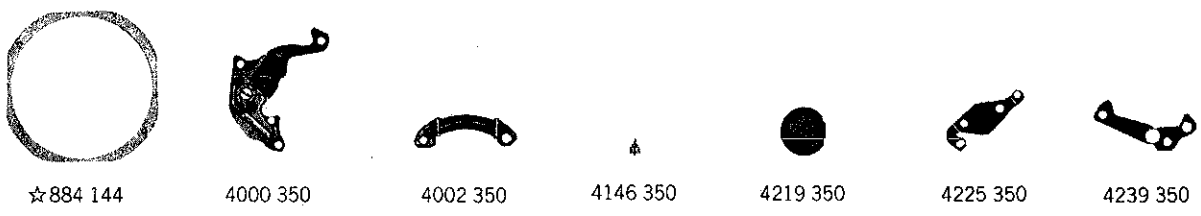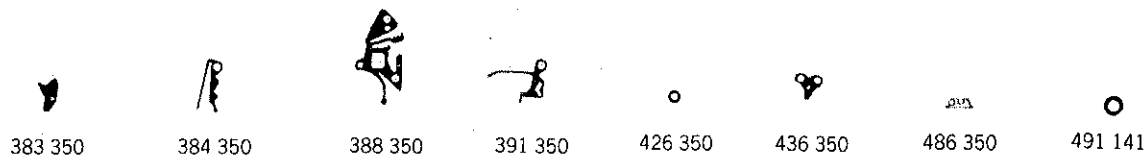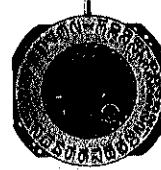

012 005	012 006	012 007	012 008	012 015	032 001	032 002
032 003	032 004	032 005	032 006	032 007	032 008	2/1

# Cal. 2A32A

## Characteristics

Casing diameter :  $\phi$  20.0 mm  
 Maximum height : 2.7 mm w'out battery  
 Jewels : 2 j  
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz . . . . Cycles per second)  
 Driving system : Step motor (2 poles)  
 Regulation system : Trimmer condenser  
 Train wheel setting  
 Calendar (Date)  
 Instant setting device for date calendar  
 Battery life indicator

PART NO.	PART NAME	PART NO.	PART NAME
<b>125 350</b>	Train wheel bridge	<b>012 007</b>	Date jumper screw (B)
<b>231 350</b>	Third wheel & pinion	<b>012 008</b>	Date driving wheel screw
☆241 352 } ☆241 355 }	Fourth wheel & pinion	<b>012 015</b>	Case screw
☆241 357 }		<b>032 001</b>	Tube for train wheel bridge (A)
<b>261 350</b>	Minute wheel	<b>032 002</b>	Tube for train wheel bridge (B)
☆270 351 } ☆270 355 }	Center minute wheel	<b>032 003</b>	Tube for circuit block cover screw (A)
☆271 351 } ☆271 363 }		<b>032 004</b>	Tube for circuit block cover screw (B)
<b>282 351</b>	Clutch wheel	<b>032 005</b>	Tube for circuit block cover screw (C)
☆354 073 } ☆354 351 }	Winding stem	<b>032 006</b>	Tube for setting lever spring screw
<b>383 350</b>		Setting lever	<b>032 007</b>
<b>384 350</b>	Yoke	<b>032 008</b>	Tube for date jumper screw (B)
<b>388 350</b>	Setting lever spring	☆ SEIKO TR621SW	Silver (II) oxide battery
<b>391 350</b>	Train wheel setting lever	☆ Maxell SR621SW	Silver oxide battery
<b>426 350</b>	Train wheel bridge support		
<b>436 350</b>	Lower end-piece for third wheel		
<b>486 350</b>	Clutch wheel guard		
<b>491 141</b>	Dial washer		
<b>556 351</b>	Date finger		
<b>701 350</b>	Fifth wheel & pinion		
☆801 126 } ☆801 127 }	Date dial		
<b>802 350</b>		Date driving wheel	
<b>808 353</b>	Date dial guard		
<b>810 350</b>	Date jumper		
<b>817 350</b>	Intermediate date wheel		
☆884 144 } ☆884 290 }	Holding ring for dial		
<b>4000 350</b>		Circuit block	
<b>4002 350</b>	Coil block		
<b>4146 350</b>	Step rotor		
<b>4219 350</b>	Battery connection insulator		
<b>4225 350</b>	Battery clamp		
<b>4239 350</b>	Rotor stator		
<b>4270 350</b>	Battery connection (-)		
<b>4398 350</b>	Crystal oscillator spacer		
<b>4408 351</b>	Circuit block spacer		
<b>4457 368</b>	Circuit block cover		
011 334	Upper hole jewel for step rotor		
011 334	Lower hole jewel for step rotor		
<b>012 005</b>	Train wheel bridge screw		
<b>012 005</b>	Circuit block cover screw		
<b>012 005</b>	Setting lever spring screw		
<b>012 006</b>	Date jumper screw (A)		







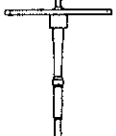
☆ ⇨ Please see remarks on the reverse page.  
 Part numbers in light letters are not shown in photos.

# Cal. 2A32A

## Remarks :

### Fourth wheel & pinion, Center minute wheel, Hour wheel

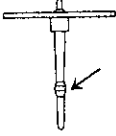There are some different types as specified below.  
Combination :

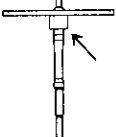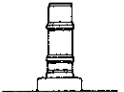Type	Fourth wheel & pinion	Center minute wheel	Hour wheel
a	 ☆241 355	 ☆270 355	 ☆271 363
b	 ☆241 357	 ☆270 351	 ☆271 351
* c	 ☆241 352		

\* As of this printing the type a combination is not used. However it may be employed in the future with certain case designs.

### Winding stem

☆354 073 } .....Refer to the photograph on the front page.  
 ☆354 351 }

If the combination of the winding stem and case is unknown, check the case number and refer to "SEIKO Quartz Casing Parts Catalogue" to choose a corresponding winding stem.

### Date dial

- ☆801 126 (Black figures on white background).....Used when both the crown and the calendar frame are located at 3 o'clock position.
- ☆801 127 (White figures on black background).....Used when the crown are located at 3 o'clock position and the calendar frame at 6 o'clock position.

If any other type of date dial is required, specify ① Cal. No. ② The crown position ③ The calendar frame position and ④ Dial No.

### Holding ring for dial

☆884 144 } ..... The type of a holding ring for dial is determined based on the design of cases.  
 ☆884 290 } ..... If there is different from the photograph, check the case number and refer to "SEIKO Quartz Casing Parts Catalogue" to choose a corresponding holding ring for dial.

### Battery

☆SEIKO TR621SW.....The substitutive battery might be added to the applied battery in the future. In that case, please refer to separate "BATTERY LIST FOR SEIKO QUARTZ WATCHES".  
 Note that SEIKO battery is marked with "SEIZAIKEN" on its (+) side.