

**LASSALE**

**QUARTZ**

**Cal. 2A52A**

**PARTS  
CATALOGUE**

# Cal. 2A52A

PART NO.	PART NAME	PART NO.	PART NAME
※125 021	Train wheel bridge		
231 350	Third wheel & pinion		
☆241 354	Fourth wheel & pinion		
☆241 355			
261 350	Minute wheel		
☆270 354	Center minute wheel		
☆270 355			
☆271 354	Hour wheel		
☆271 355			
282 351	Clutch wheel		
☆354 073	Winding stem		
☆354 361	Winding stem		
383 350	Setting lever		
384 350	Yoke		
388 350	Setting lever spring		
391 350	Train wheel setting lever		
426 350	Train wheel bridge support		
426 351	Train wheel bridge support		
436 350	Lower end-piece for third wheel		
486 350	Clutch wheel guard		
491 141	Dial washer		
556 351	Date finger		
701 350	Fifth wheel & pinion		
☆801 119	Date dial		
801 297	Date dial		
802 350	Date driving wheel		
808 352	Date dial guard		
810 350	Date jumper		
817 350	Intermediate date wheel		
☆884 142	Holding ring for dial		
4000 350	Circuit block		
4002 350	Coil block		
4146 350	Step rotor		
4219 350	Battery connection insulator		
4225 350	Battery clamp		
4239 350	Rotor stator		
4270 350	Battery connection (—)		
4398 350	Crystal oscillator spacer		
4408 350	Dial spacer		
4408 351	Circuit block spacer		
※4457 327	Circuit block cover		
011 334	Upper hole jewel for step rotor		
011 334	Lower hole jewel for step rotor		
012 005	Train wheel bridge screw		
012 005	Circuit block cover screw		
012 005	Setting lever spring screw		
012 008	Date driving wheel screw		
012 798	Date jumper screw (B)		
032 001	Tube for train wheel bridge (A)		
032 003	Tube for circuit block cover screw (A)		
032 004	Tube for circuit block cover screw (B)		
032 005	Tube for circuit block cover screw (C)		
032 006	Tube for setting lever spring screw		
032 009	Tube for train wheel bridge (B)		
SEIKO TR621SW Maxell SR621SW U. C. C. 364 SONY EVEREDY364	Battery		

※ mark : New Parts.

☆ mark : Refer to the Parts Catalogue Cal. 2A series.