


SEIKO

QUARTZ

Cal. 4325A

PARTS LIST

Cal. 4325A

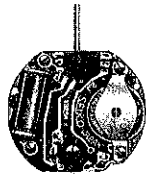

131 073



154 004



195 003



231 026



241 037



261 221



270 013



271 031



282 028



354 041



354 043



372 003



373 250



☆383 026



384 013



385 007



388 013



391 011



396 006



397 017




556 011



701 005



706 004

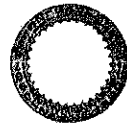

☆801 220



802 016



803 003



808 021



810 009



817 011



☆884 090



4001 089



4002 009



4146 006



☆4225 012



☆4242 071



4259 003



4270 020



011 541



SEIKO SB-D1

| | | | | | | | | | |
|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| | | | | | | | | | |
| 012 354 | 012 417 | 012 443 | 012 444 | 012 448 | 012 752 | 012 774 | 012 775 | 012 923 | 017 074 |
| | | | | | | | | | |
| 017 075 | 017 076 | 017 079 | 017 503 | 017 714 | 017 924 | | | | 2/1 |

Cal. 4325A

Characteristics

Casing diameter: ϕ 18.00 mm
 Maximum height: 4.11 mm
 Jewels: 2j
 Frequency of quartz crystal oscillator: 32,768 Hz (Hz=Hertz.....Cycles per second)
 Driving system: Step motor system (2 poles)
 Regulation system: Trimmer condenser
 Second-setting device
 Calendar (date)
 Instant date setting
 Battery life indicator: Second hand moves in two-second interval

| PART NO. | PART NAME | PART NO. | PART NAME |
|-----------|---|----------------------------|---|
| 131 073 | Third wheel bridge | 012 443 | Circuit block screw A (Screw for holding spring for battery, screw for plus terminal of battery connection) |
| 154 004 | Fifth wheel bridge | 012 444 | Calendar plate screw |
| 195 003 | Calendar plate | 012 448 | Back plate (anti-magnetic) screw |
| 231 026 | Third wheel & pinion | 012 752 | Fifth wheel bridge screw |
| 241 037 | Fourth wheel & pinion | 012 774 | Date dial guard screw |
| 261 221 | Minute wheel | 012 775 | Circuit block screw B |
| 270 013 | Center minute wheel | 012 923 | Stopper screw for third wheel bridge |
| 271 031 | Hour wheel | 017 074 | Stopper tube for circuit block |
| 282 028 | Clutch wheel | 017 075 | Tube for third wheel bridge screw |
| 354 041 | Winding stem (12.89 mm) | 017 076 | Tube for circuit block screw A |
| 354 043 | Winding stem (17.89 mm) | 017 079 | Tube for circuit block screw B |
| 372 003 | Joint stem (movement portion) | 017 503 | Spacer for circuit block |
| 373 250 | Joint stem (crown portion) | 017 714 | Lower bush for fifth wheel |
| ☆383 026 | Setting lever | 017 924 | Eccentric dial pin |
| ☆383 027 | | SEIKO SB-D1 | Silver oxide battery |
| ☆383 034 | | U.C.C.384 } U.C.C.392 } | Silver oxide battery |
| 384 013 | Yoke (Clutch lever) | | |
| 385 007 | Yoke spring (Clutch lever spring) | | |
| 388 013 | Setting lever spring | | |
| 391 011 | Second setting lever | | |
| 396 006 | Friction spring for fourth wheel & pinion | | |
| 397 017 | Lever for unlocking stem | | |
| 556 011 | Date finger | | |
| 701 005 | Fifth wheel | | |
| 706 004 | Sixth wheel & pinion | | |
| ☆801 042 | Date dial | | |
| ☆801 075 | | | |
| ☆801 076 | | | |
| ☆801 220 | | | |
| ☆801 226 | | | |
| 802 016 | Date driving wheel | | |
| 803 003 | Setting wheel lever complete | | |
| 808 021 | Date dial guard | | |
| 810 009 | Date jumper | | |
| 817 011 | Intermediate date wheel | | |
| ☆884 090 | Holding ring for dial | | |
| 4001 089 | Circuit block | | |
| 4002 009 | Coil block | | |
| 4146 006 | Step rotor | | |
| ☆4225 012 | Holding spring for battery | | |
| ☆4242 071 | Plus terminal of battery connection | | |
| 4259 003 | Back plate (Anti-magnetic) | | |
| 4270 020 | Battery connection | | |
| 011 541 | Upper hole jewel for step rotor | | |
| 011 541 | Lower hole jewel for step rotor | | |
| 012 354 | Setting lever spring screw | | |
| 012 417 | Third wheel bridge screw | | |

☆⇨ Please see remarks on the reverse page.
 Part numbers in light letters are not shown in photos.

Cal. 4325A


Remarks :

Setting lever


- ☆383 026 }
☆383 027 } There are three types of setting levers. Select the suitable setting lever by
☆383 034 } referring to the shapes in the lower diagram.



☆383 026

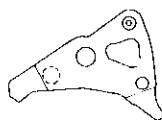

☆383 027

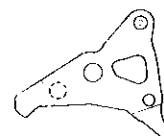

☆383 034

If the combination of the setting lever and case is unknown, check the case number and refer to "SEIKO Quartz Casing Parts List" to choose an appropriate setting lever.

Date dial

- ☆801 042 (Red figures on white background).....Used when the crown is located at 3 o'clock and the calendar frame at 6 o'clock position.
- ☆801 075 (Black figures on gold background).....Used when both the crown and the calendar frame are located at 3 o'clock position.
- ☆801 076 (Black figures on gold background).....Used when the crown is located at 3 o'clock and the calendar frame at 6 o'clock position.
- ☆801 220 (Red figures on white background).....Used when both the crown and the calendar frame are located at 3 o'clock position.
- ☆801 226 (Black figures on white background).....Used when both the crown and the calendar frame are located at 3 o'clock position.

If any other type of date dial is required, specify ① Cal. No. ② jewels ③ the crown position ④ the calendar frame position and ⑤ Dial No.

Holding ring for dial

The type of a holding ring for dial is determined based on the design of cases and dials. Check the case number and refer to "SEIKO Quartz Casing Parts List" to choose an appropriate holding ring for dial.

Holding spring for battery

- ☆4225 012.....Used only for case without battery hatch.

Plus terminal of battery connection

- ☆4242 071.....Used only for case with battery hatch.