


**SEIKO**

**QUARTZ**

**Cal.7810A**

**PARTS LIST**

<b>Calibre No.</b> <h1 style="text-align: center;">7810A</h1>	<b>Jewels</b> <h2 style="text-align: center;">5j</h2>	<b>Style Name</b>
		<b>Characteristics</b> Casing diameter : $\phi$ 23.3 mm Maximum height : 2.9 mm Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz . . . . . Cycle per second) Driving system : Step motor system (2 poles) Regulation system : Trimmer condenser Second setting device Battery life indicator : Second hand moves in two-second interval.

		+		T	T
122 781	131 781	O		●	●
221 781	225 781	231 781	241 781		
●	●	●	□		
261 781	271 781	281 589	282 781	354 780	383 780
		-		●	●
384 781	386 781	390 780	391 781	399 780	491 589
+				●	
701 781	☆884 682	4001 781	4002 781	4146 781	4216 781
4242 780	4259 770	SEIKO SB-AP			

					$\frac{2}{1}$
022 426	022 468	022 491	022 764	027 492	

☆⇨ Please see remarks on the next page.

Calibre No.		Jewels	Style Name	
<b>7810A</b>		<b>5j</b>		
PART NO.	PART NAME	PART NO.	PART NAME	
122 781	Center wheel bridge			
131 781	Third wheel bridge			
221 781	Center wheel & pinion			
225 781	Cannon pinion			
231 781	Third wheel & pinion			
241 781	Fourth wheel & pinion			
261 781	Minute wheel			
271 781	Hour wheel			
281 589	Setting wheel			
282 781	Clutch wheel			
354 780	Winding stem			
383 780	Setting lever			
384 781	Yoke (Clutch lever)			
386 781	Setting lever spring			
390 780	Setting lever axle			
391 781	Second-setting lever			
399 780	Casing clamp			
491 589	Dial washer			
701 781	Fifth wheel & pinion			
☆884 682	Holding ring for dial			
4001 781	Circuit block			
4002 781	Coil block			
4146 781	Step rotor			
4216 781	Insulator for battery connection			
4242 780	Plus terminal of battery connection			
4259 770	Anti-magnetic shield plate			
022 426	Casing clamp screw			
022 468	Center wheel bridge screw			
022 468	Third wheel bridge screw			
022 468	Anti-magnetic shield plate screw			
022 468	Circuit block screw			
022 491	Setting lever spring screw			
022 764	Dial screw			
027 492	Pin for plus terminal of battery connection			
011 324	Upper hole jewel for fifth wheel			
011 324	Lower hole jewel for fifth wheel			
011 404	Upper hole jewel for fourth wheel			
011 537	Upper hole jewel for step rotor			
011 537	Lower hole jewel for step rotor			
SEIKO SB-AP	Silver oxide battery			
<b>Remarks :</b>				
Holding ring for dial				
☆884 682.....The type of holding ring for dial is determined based on the design of cases and dials. Check the case number and refer to "SEIKO Quartz Casing Parts List" to choose a corresponding holding ring for dial.				

☆⇒ Please see remarks.