


SEIKO

QUARTZ

Cal. 8123A

**PARTS
CATALOGUE**

Cal. 8123A

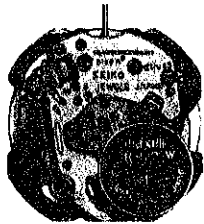

125 775



221 755



231 755



241 765



261 755



271 765



281 755



282 761



354 765



383 755



384 755




388 765



391 755



399 755

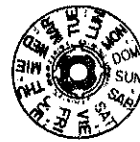


☆470 612



701 755




719 755

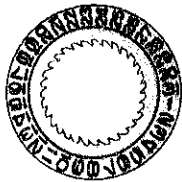


☆801 622



 802 755



808 755

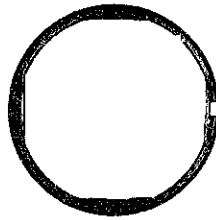

☆884 967



963 781



4001 756



4002 755



4146 755



4239 755



4270 755



4271 775



4450 775



☆Maxell SR1120SW



022 247



022 248



022 427

2/1

Cal. 8123A

Characteristics

Casing diameter : ϕ 25.6 mm
 Maximum height : 2.9 mm without battery
 Jewels : 5 j
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz Cycles per second)
 Driving system : Step motor (2 poles)
 Regulation system : Regulating switch lever
 Train wheel setting
 Calendar (Day and Date)
 Instant setting device for day and date calendar
 Bilingual change over system
 Battery life indicator : The second hand moves in two-second interval.

| PART NO. | PART NAME | PART NO. | PART NAME |
|----------|---|------------------|---|
| 125 775 | Train wheel bridge | ☆027 116 | Tube for battery connection (+) screw (C) |
| 221 755 | Center wheel & pinion | ☆027 117 | Tube for battery connection (+) screw (D) |
| 231 755 | Third wheel & pinion | 027 118 | Tube for setting lever spring screw |
| 241 765 | Fourth wheel & pinion | 027 119 | Tube for date dial guard screw |
| 261 755 | Minute wheel | 027 120 | Tube for battery connection (-) screw |
| 271 765 | Hour wheel | 027 121 | Tube for casing clamp screw |
| 281 755 | Setting wheel | 027 739 | Setting lever pin |
| 282 761 | Clutch wheel | 027 740 | Day corrector pin |
| 354 765 | Winding stem | ☆Maxell SR1120SW | Silver oxide battery |
| 383 755 | Setting lever | ☆U.C.C. 381 | |
| 384 755 | Yoke | ☆SEIKO TR1120SW | |
| 388 765 | Setting lever spring | | |
| 391 755 | Train wheel setting lever | | |
| 399 755 | Casing clamp | | |
| ☆470 612 | Day star with dial disk | | |
| 701 755 | Fifth wheel & pinion | | |
| 719 755 | Day corrector | | |
| ☆801 622 | Date dial | | |
| 802 755 | Date driving wheel | | |
| 808 755 | Date dial guard | | |
| ☆884 967 | Holding ring for dial | | |
| 963 781 | Snap for day star with dial disk | | |
| 4001 756 | Circuit block | | |
| 4002 755 | Coil block | | |
| 4146 755 | Step rotor | | |
| 4239 755 | Rotor stator | | |
| 4270 755 | Battery connection (-) | | |
| 4271 775 | Battery connection (+) | | |
| 4450 775 | Regulating switch lever | | |
| 022 247 | Train wheel bridge screw | | |
| 022 247 | Battery connection (-) screw | | |
| 022 247 | Battery connection (+) screw | | |
| 022 247 | Setting lever spring screw | | |
| 022 248 | Date dial guard screw | | |
| 022 427 | Casing clamp screw | | |
| 011 325 | Upper hole jewel for fourth wheel | | |
| 011 542 | Upper hole jewel for third wheel | | |
| 011 542 | Upper hole jewel for fifth wheel | | |
| 011 547 | Lower hole jewel for step rotor | | |
| 011 568 | Upper hole jewel for step rotor | | |
| ☆027 112 | Tube for train wheel bridge (A) | | |
| ☆027 113 | Tube for train wheel bridge (B) | | |
| ☆027 114 | Tube for battery connection (+) screw (A) | | |
| ☆027 115 | Tube for battery connection (-) screw (B) | | |

☆ ⇨ Please see remarks on the reverse page
 Part numbers in light letters are not shown in photos

Cal. 8123A

Remarks :

Day star with dial disk

- ☆470 612 (English↔ Spanish, Black figures on white background)
Used when both the crown and the calendar frame are located at 3 o'clock position.
 If any other type of day star with dial disk is required, specify the number printed on the disk.

Date dial


- ☆801 622 (Black figures on white background)Used when both the crown and the calendar frame are located at 3 o'clock position.
 If any other type of date dial is required, specify ① Cal. No. ② The crown position ③ The calendar frame position ④ Dial No. and ⑤ Color of date dial.

Holding ring for dial

- ☆884 967The type of a holding ring for dial is determined based on the design of cases.
 If the shape of holding ring for dial is different from the photograph, check the case number and refer to "SEIKO Quartz Casing Parts Catalogue" to choose a corresponding holding ring for dial.

Tube for train wheel bridge (A), Tube for train wheel bridge (B), Tube for battery connection (+) screw (A), Tube for battery connection (+) screw (B), Tube for battery connection (+) screw (C), Tube for battery connection (+) screw (D).

- ☆027 112)
- ☆027 113)
- ☆027 114)Refer to the illustration below for the position of the above parts.
- ☆027 115)
- ☆027 116)
- ☆027 117)

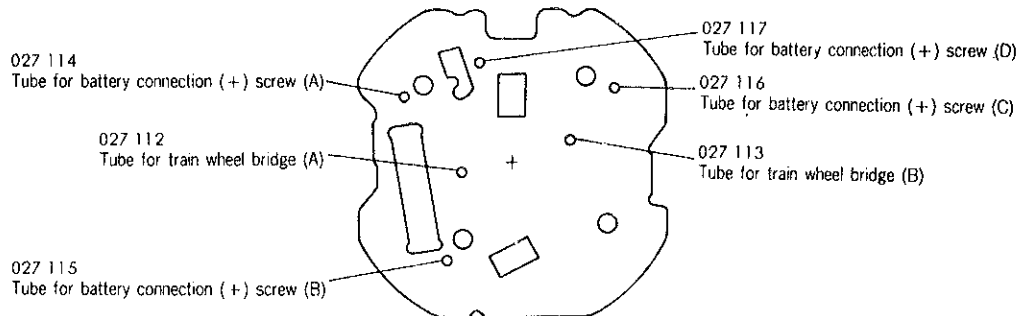

Battery

- ☆SEIKO TR1120SW }The substitutive battery might be added to the applied battery in the future.
- ☆Maxell SR1120SW } In that case, please refer to separate "BATTERY LIST FOR SEIKO QUARTZ WATCHES".
- ☆U.C.C. 381 } Note that SEIKO battery is marked with "SEIZAIKEN" on its (+) side