


Instruction Manual

Room 1605, 16/F., Eastern Centre, 1065 King's Road, Quarry Bay, Hong Kong Tel: (852) 2168 3388 Fax: (852) 2552 3181 Email: sales@isa-pacific.com Web site: www.isaswiss.com

Calibre: 9232 / 1930

Function: Month, date, Second time zone / 24 hour

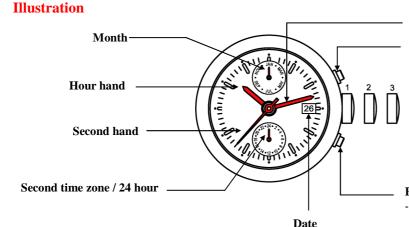

Minute hand

Push button A

- Quick correction of month.

Crown Positions:

- 1. Normal position
- 2. Quick correction of date
- 3. Correction of hour, minute, date and second time zone/24-hour

Push button B

Quick correction of second time zone / 24-hour

A. Set the time - Hour, Minute and 24 Hour



- 1. Pull the crown out to position 3.
- 2. Turn the crown clockwise to set the hour, minute and 24-hour hands to the desired time.
- 3. Push the crown back to position 1.

B. Set the Second Time Zone



 




- 1. Set the crown at position 1.
- 2. Press B step-by-step to advance the hand of the second time zone by one hour per step until the desired time is set.
- 3. Stop pressing the button after finished the setting.

C. Set the Date





- Turn the crown clockwise. The date will advance 1 day when the time reaches 00:00midnight. Continue to turn the crown until the desired date is set.
- 3. Push the crown back to position 1.



Quick Correction of Date:

- 1. Pull the crown out to position 2.
- 2. Turn the crown clockwise step-by-step to the desired
- 3. Push the crown back to position 1.

!! Attention !! : Please Do Not set it between 21:00 and 00:30 midnight.

E. Set the Month







- 1. Set the crown at position 1.
- 2. Press A step-by-step to adjust the month to the desired one
- 3. Stop pressing the button after finished the setting.

!! Attention !!: Please Do Not use Quick Correction on 31th of each month .

<u>Battery</u>: 371 – SR920SW