§4. DISASSEMBLY AND ASSEMBLY OF THE MODULE

- Lubrication narjubgs

Ⓐ: A-Lube oil
Ⓥ: V-Lube oil
CH-1 oil
Ⓕ: F-Lube oil

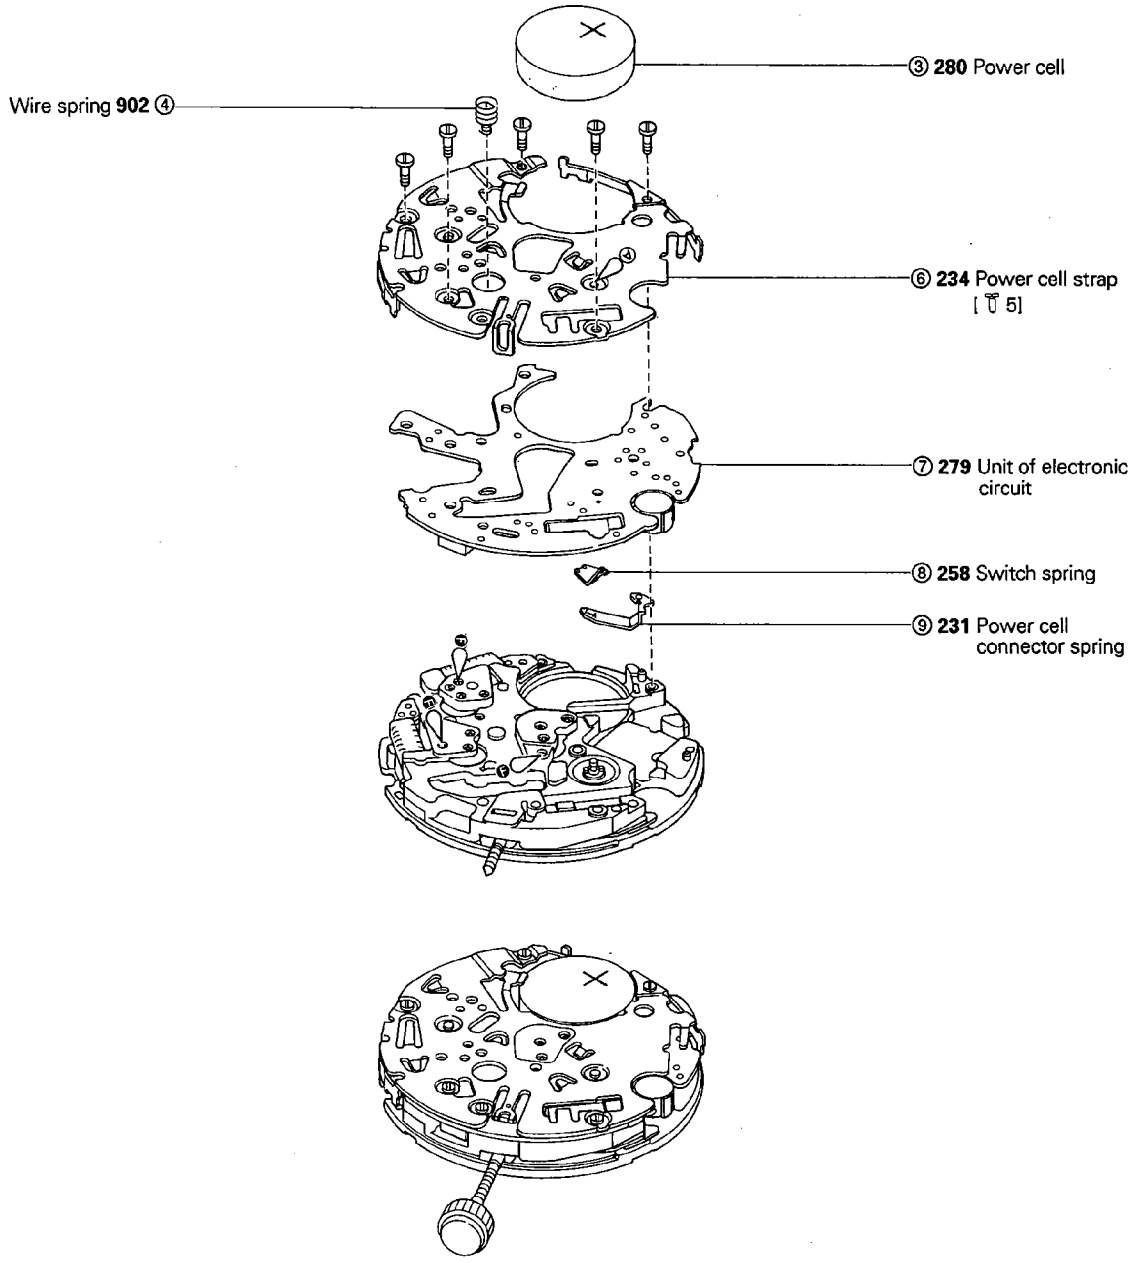

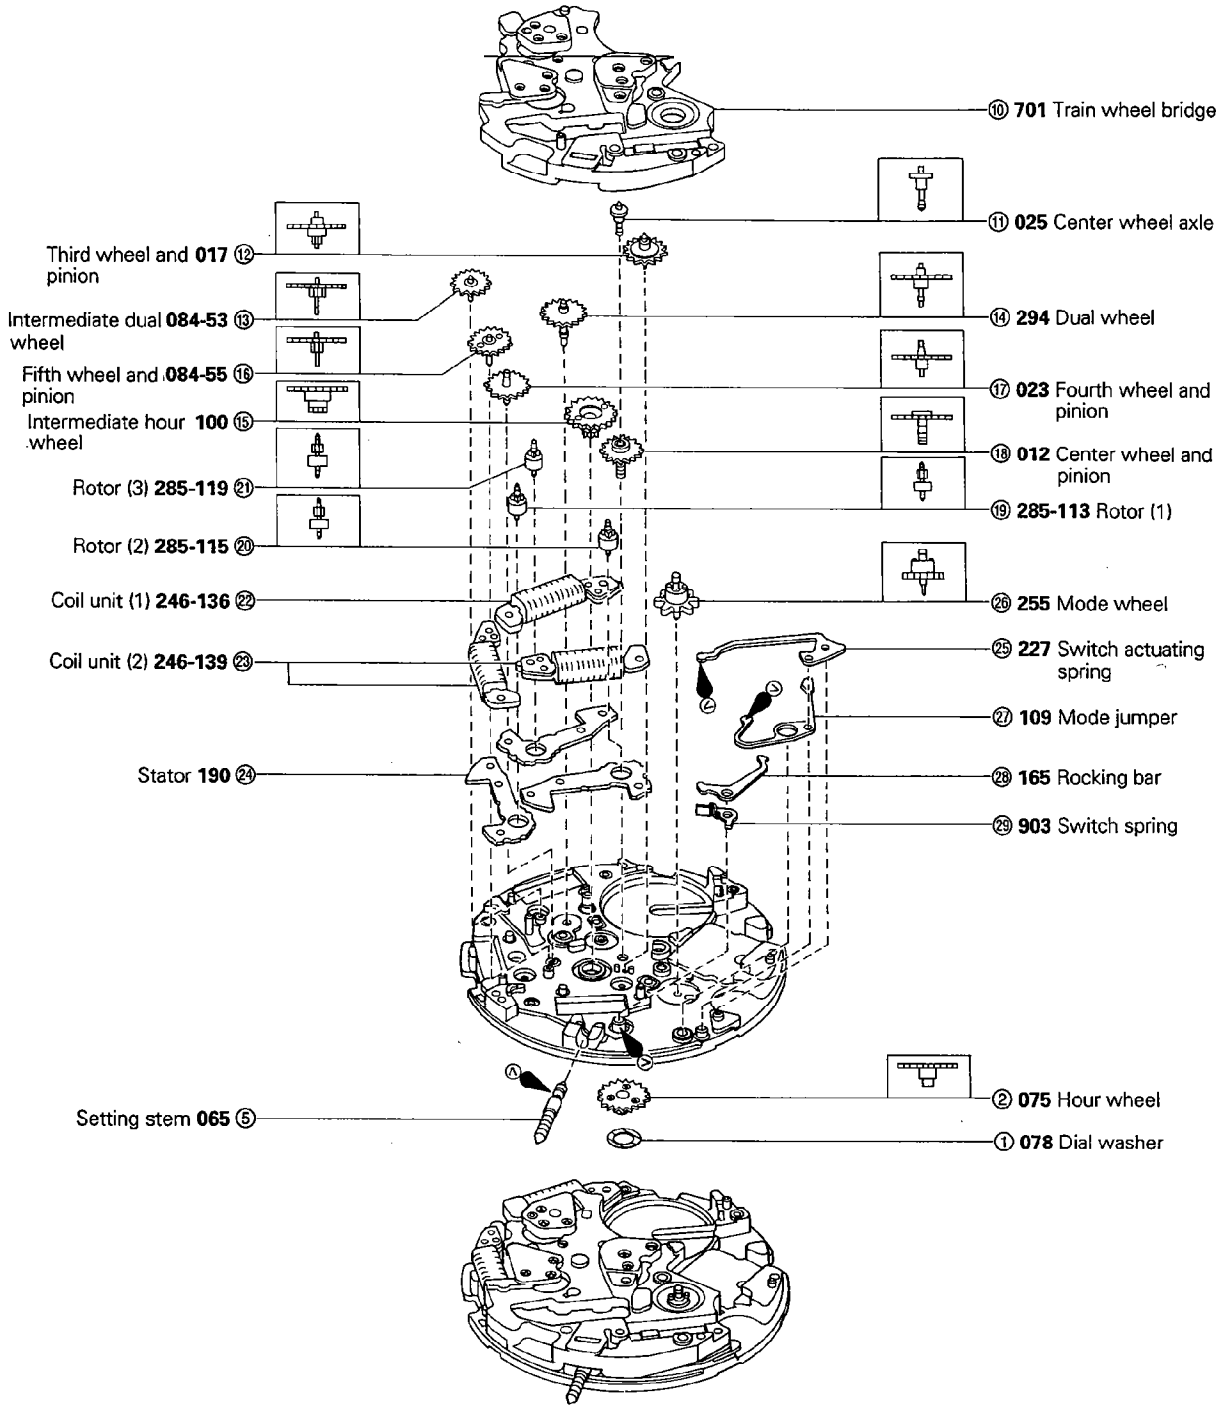
⑩ 701 Train wheel bridge
⑪ 025 Center wheel axle
Third wheel and 017 ⑫ pinion
Intermediate dual 084-53 ⑬ wheel
⑭ 294 Dual wheel
Fifth wheel and 084-55 ⑯ pinion
⑰ 023 Fourth wheel and pinion
Intermediate hour 100 ⑮ wheel
⑱ 012 Center wheel and pinion
Rotor (3) 285-119 ㉑
⑲ 285-113 Rotor (1)
Rotor (2) 285-115 ⑳
Coil unit (1) 246-136 ㉒
㉖ 255 Mode wheel
Coil unit (2) 246-139 ㉓
㉕ 227 Switch actuating spring
㉗ 109 Mode jumper
Stator 190 ㉔
㉘ 165 Rocking bar
㉙ 903 Switch spring
② 075 Hour wheel
Setting stem 065 ⑤
① 078 Dial washer