


Phone ++41 (0)61 926 50 00 Fax ++41 (0)61 926 50 50

www.ronda.ch · info@ronda.ch

## Technical Instructions 5030.D

# Specification

## 12 ½'''

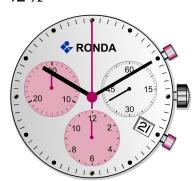



#### Dimensions and battery

ø Total	28.60 mm
ø Case fitting	28.00 mm
Movement height	4.40 mm
Movement rest	0.60 mm
Height of stem	1.90 mm
Stem: Thread / Distance	0.90 mm / 0.90 mm
Battery / Autonomy	Nr. 395 / 48 Months

#### Performances

	Small second (M1): 4.0 - 6.7 µNm
Torque T	Minute hand (M1): 200 - 300 μNm
	Counter (M2, M3, M4): 3.0 - 4.6 µNm
Operating temperature	0°C - 50°C
Res. against magn. fields	18.8 Oe = 1500 A/m
Resistance against shock	NIHS 91 - 10



Position I (crown)	Neutral
Position II (crown)	Setting the date (quick mode)
Position III (crown)	Setting time and adjusting chrono hands
Pusher A	START / STOP / ADD
Pusher B	ZERO POSITIONING / SPLIT
	Small second





20 Mar 2006




Phone ++41 (0)61 926 50 00 ++41 (0)61 926 50 50

www.ronda.ch · info@ronda.ch

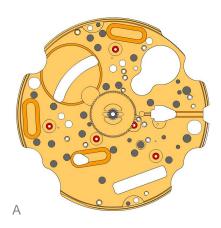

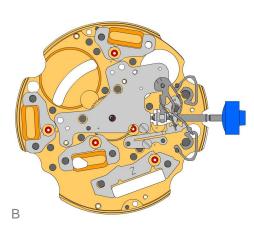

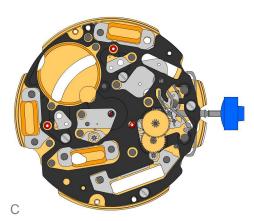

20 Mar 2006

### Technical Instructions 5030.D

### Assembling

1. <u>2000.574.CO</u> Main plate



2. 3305.275.CO



Cannon pinion with driver (Aig 1)

Moebius 8200 greace must be placed between the steel tube and the brass wheel. The steel tube must be placed into the center hole of the main plate.

Centre bridge
Use one screw 4000.250 to fix the center bridge. 3. 2030.017.CO 4. 3001.041 Sliding pinion The sliding ponion must be holded using a tweezers, untill the stem is inserted. 瞓 5. 3000.177.CO Handsetting stem Prior to the insertion of the stem, some greace must be placed on the square part of the stem.

6. 3017.049 Setting lever
The cam on the setting lever must be inserted into the cut out on the stem. (the setting lever must be greaced)

7. 3905.049 Setting lever jumper (3 positions) The setting lever jumper (3 positions) must be tensioned and inserted into the setting lever. Use one screw 4000.250 to fix the setting lever.

8. 4000.250 Screw

9. 3015.076 Yoke (3 positions) The yoke must be inserted below, into the cut out of the sliding pinion.

10. <u>3905.058</u> The yoke spring must be positioned on the yoke. The opposite end of the yoke must be positioned around the pillar of setting lever. Use Moebius 8200 to grease the yoke.

11. 3406.030 Pusher jumper 2 pieces. Use Jismaa 124 to greace the pusher jumper. 12. 3622.040 Stator

13. <u>3622.039</u> Stator (counter 6h, 9h and chrono)

14. <u>3603.065</u> Plastic bracket

15. <u>4000.250</u> Screw

16. <u>3715.094.RK</u> Rotor (centre and chrono) Use an antimagnetic tweezers to place the 2 rotors.


17. <u>3147.046.CO</u> Intermediate wheel 18. <u>3136.142.CO</u> Second wheel (long)

2



Phone ++41 (0)61 926 50 00 ++41 (0)61 926 50 50

www.ronda.ch · info@ronda.ch

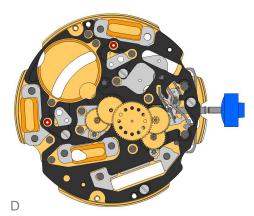

### Technical Instructions 5030.D

### Assembling

Intermediate wheel (chrono) 20. 3136.143.CO Chronograph wheel (Aig 1)

21. <u>3122.056.CO</u> Third wheel

19. <u>3147.047.CO</u>

22. 2020.148

Train wheel bridge
Attention: Prior to the fastening process of the bridge, all 7 pins of the wheels must be visible in the 7 holes in the bridge. Use 3 screws 4000.250.

23. <u>3715.095.RK</u>

Rotor (counter 6h and 9h)

Use an antimagnetic tweezers to place the rotor.

24. <u>3147.048.CO</u> Intermediate wheel (counter)

Minute counting wheel

25. 3402.006.CO

26. 2020.149

Counter train wheel bridge
Attention: Prior to the fastening process of the bridge, all 4 pins of the wheels must be visible in the 4 holes of the bridge. Use 3 screws 4000.250.

27. <u>3715.095.RK</u> Rotor (counter 6h and 9h)

Use an antimagnetic tweezers to place the rotor.


28. 3147.048.CO Intermediate wheel (counter)

29. 3402.006.CO Minute counting wheel

30. 2020.149

Counter train wheel bridge
Attention: Prior to the fastening process of the bridge, all 4 pins of the wheels must be visible in the 4 holes of the bridge. Use 3 screws 4000.250.

31. 4000.250 Screw

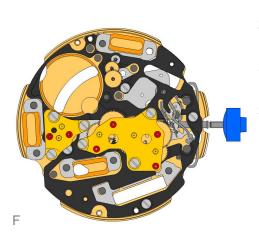


Е



Phone ++41 (0)61 926 50 00 Fax ++41 (0)61 926 50 50


www.ronda.ch · info@ronda.ch

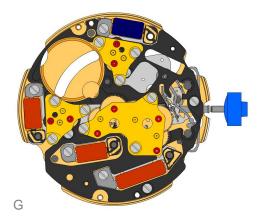

### Technical Instructions 5030.D

## **Assembling**

32. 9014.000	Moebius 9014
<b>^</b> •	Use Moebius 9014 on bearing of all rubis
33. 3621.053.RK	Coil
	The wire of the coil (red area) is very sensitiv to mechanical impacts. Hold the coil only ouside the red area. Fix the coil by 1screw 4000.250.
34. 3621.054.RK	Coil (counter 9h and chrono)
	The wire of the coil (red area) is very sensitiv to mechanical impacts. Hold the coil only ouside the red area. Fix each of the 2 coils by 1screw 4000.250
35. <u>3</u> 621.055.RK	Coil (counter 6h)
	Coil (counter 6h)">The wire of the coil (blue area) is very sensitiv to mechanical impacts. Hold the coil only ouside the blue area. Fix the coil by 1screw 4000.250.
36. 4000.250	Screw

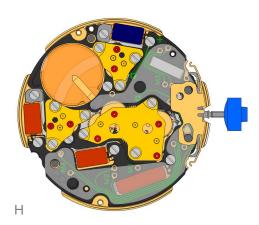

37. 3603.034

Battery insulator

38. 3612.144.5030

Electronic module

After assembly of the electronic module it is the best time to perform the electrical measurements. Use 5 screws 4000.248 to fix the electronic module.

39. 4000.248


Screw

40. 3603.069

Circuit insulator

Pusher contact spring

Make shure, that the pusher contact spring is placed correctly onto the pillars.

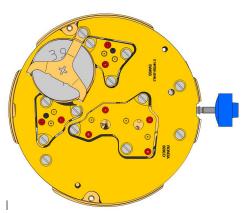

42. 2130.137.5030.D Electronic module cover (counter 6h/9h)

Make shure, that the pusher contact spring is not displaced during attachment of the electronic module cover. Use 3 screws 4000.250 to fix the electronic module cover

43. 3600.010

Battery

Use a plastic tweezers to place the battery (to avoid short circuit of battery).

44. 3601.109

Bridle +

Insert the two brackets of the battery bridle under the electronic module cover and fasten the battery bridle by 1 screw 4000.250.

45. 4000.250

Screw

20 Mar 2006